
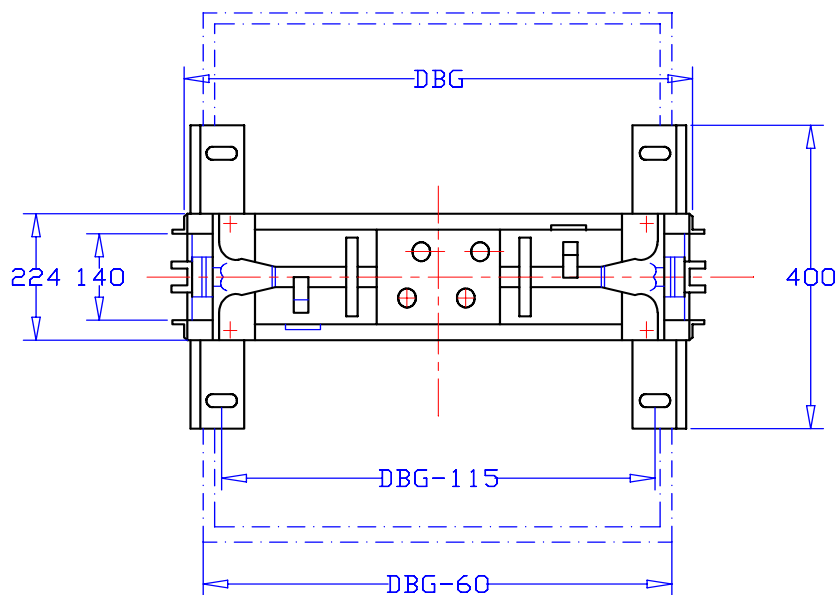


Traction car slings (progressive type)

Arcades à câbles (prise progressive)

Arcata a fune (presa progressiva)

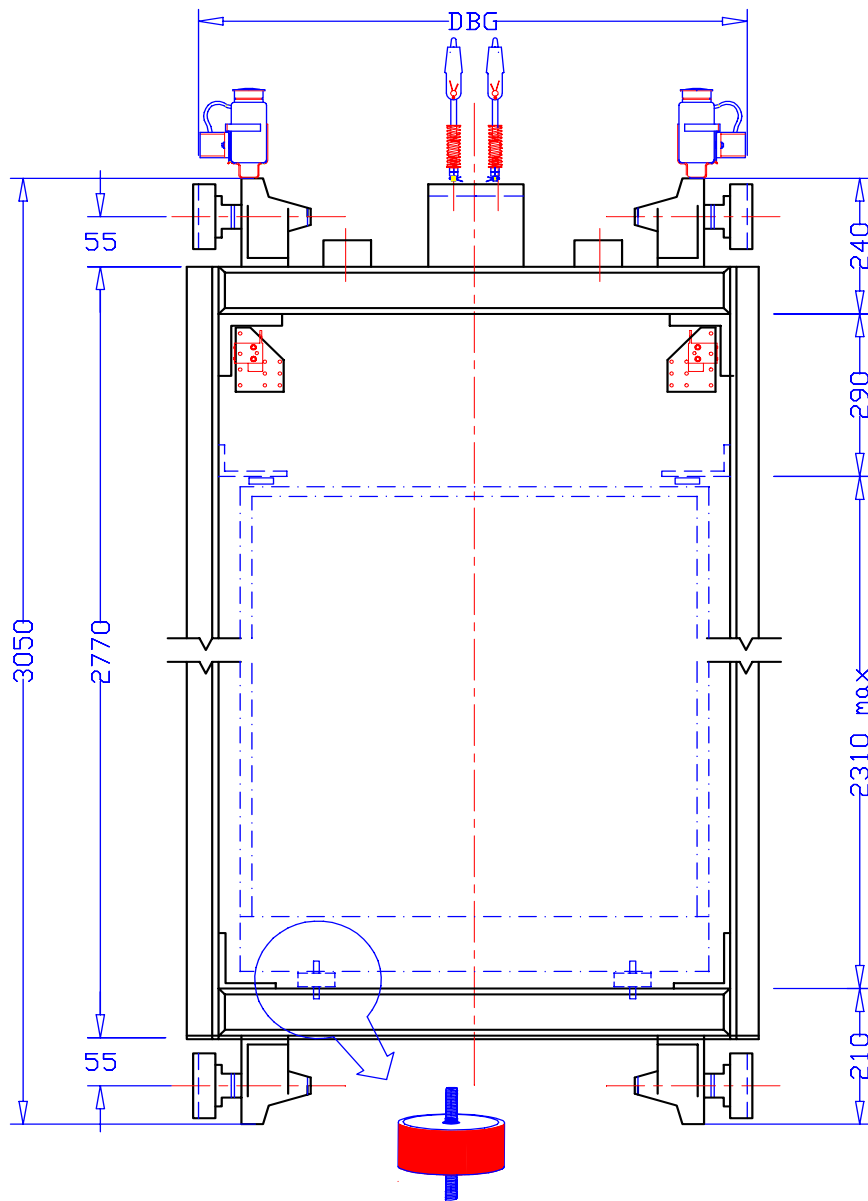

**DBG:** to define  
de définir  
da definire

Kg	Cod.
320	CARE-CP04
400	CARE-CP05
480	CARE-CP06
640	CARE-CP08
750	CARE-CP10