


Counterweight frames (progressive type)

Encadrement contrepoids (prise progressive)

Telaio per contrappeso (presa progressiva)

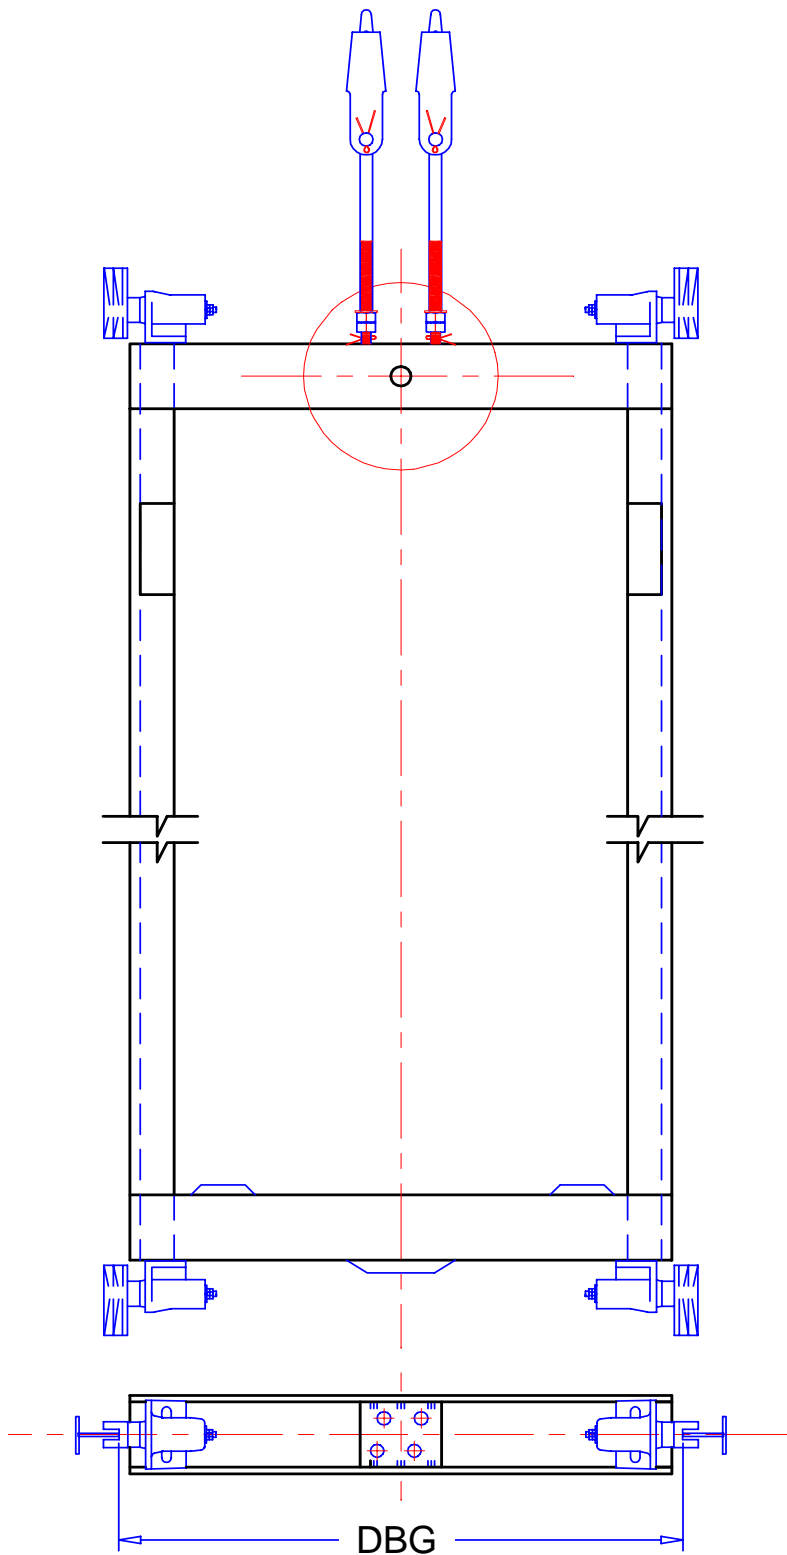

DBG: to define
de définir
da definire

Kg	Cod.
320	CARE-PP04
400	CARE-PP05
480	CARE-PP06
640	CARE-PP08
750	CARE-PP10